



Portability Mobility WiReless

MUSIC SPEAKER P/N NMSP3C2XXX

USER GUIDE



The PMR Wireless Music Speaker System (Music Speaker) offers high sound quality using the latest innovations in Bluetooth wireless technology. It wirelessly plays music from a stereo source and also allows mobile phone calls to be taken using its built-in microphone and speakers. Compact size, slim design and a built-in microphone function help to make up a fashionable, comfortable, state of the art package. With it, you can listen to your favorite high quality music without any wires, and if you get an incoming call on your mobile phone, Music Speaker will switch audio to the call. You can make outgoing calls and you can control the phone call from the Music Speaker itself. You need never miss another call while enjoying your music.




Declaration of Conformity.

We declare that product NMSP3C2XXX conforms to the R&TTE Directive 1999/5/EC



GETTING STARTED

Remove all components from the package. Items in the pack include: Music Speaker, USB Charger cable and this User Guide. Please check the contents carefully and contact your local dealer immediately if there are any shortages.

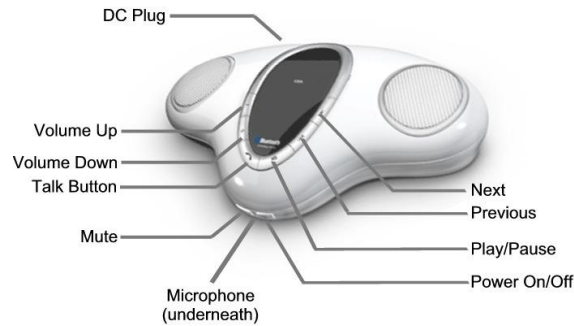

GETTING TO KNOW YOUR MUSIC SPEAKER

See image above. Please note some models will differ slightly in style, colour and the functionality may vary according to their specifications.

CHARGING YOUR MUSIC SPEAKER

Music Speaker comes with a built-in high capacity rechargeable battery.

To charge Music Speaker

Connect the DC plug into Music Speaker. The amber LED stays on continuously to indicate that charging is in progress. Once the battery is charged, the amber LED will switch off. You can charge the battery whether the unit is off or in use.

Battery Indication: The amber LED can turn off after less than 2 hours charging; this normally indicates that Music Speaker is ready for use. **However, for the initial charge, it is recommended that you charge the Music Speaker for at least 2 hours in order to fully prepare the battery for normal operation.**

TURNING MUSIC SPEAKER ON/OFF

Turn on Music Speaker

Push in the Power button. The two LEDs (Blue and Amber) will start to flash alternately. Music Speaker is now turned on and in pairing mode.

Turn off Music Speaker

Push the power button and release it.

PAIRING MUSIC SPEAKER WITH A STEREO MUSIC PLAYER

Pairing is the procedure for linking two Bluetooth devices. Before you can listen to stereo music using Music Speaker you must pair it with a stereo player source such as an MP3 player, Bluetooth mobile phone or PC.

Pairing steps:

- Make sure your stereo player supports the Bluetooth AV profile (A2DP). (For PCs or Notebooks you must have installed a Bluetooth driver which supports the AV profile/A2DP.)
- Turn on Music Speaker. It will go into pairing mode automatically as indicated by the amber and blue LEDs flashing alternately.
- Place the Music Speaker within a few meters of the stereo player.
- On the stereo player initiate the device discovery procedure. (Refer to the stereo player's user guide for details of how to do this)
- After a few seconds the stereo player should display Music Speaker's Bluetooth name: "BlueBox".
- When prompted by your stereo player enter the default pin code "0000".
Note: For some Embedded Bluetooth audio transmitters, the pin code is fixed in the firmware; the user doesn't need to enter this pin code. However, the pin code must be "0000"
- When pairing is complete, the amber LED will switch off and the blue LED will blink slowly.

Tips for Pairing Devices:

1. Normally you only have to pair with a stereo player once. After that you simply switch on Music Speaker and the stereo player.
2. If you want to use Music Speaker with a stereo player and your mobile phone you should pair Music Speaker with both devices. When pairing with one device, please make sure the other one is turned off or its Bluetooth function is turned off.
3. For mobile phones that support both the Hands Free profile and the AV profile, you only need to pair Music Speaker once. The phone should automatically connect with Music Speaker using the appropriate profile.

LISTENING TO MUSIC

Before you listen to music, make sure your stereo player has already been connected to Music Speaker. Simply switch both devices on and Music Speaker will automatically play music from your player.

Adjusting the volume

To increase the volume

Click the Volume Up button + to increase volume by 1 step. Repeat this until you have reached the desired level.

To decrease the volume

Press the Volume Down button - to decrease volume by 1 step. Repeat this until you have reached the desired level.

REMOTE CONTROLS ON MUSIC SPEAKER

Using Music Speaker's remote control feature you can control your stereo player using the buttons on Music Speaker itself. Note: This feature is player dependent; please make sure your player supports the "AVRCP" Remote Control profile in order to use this feature.

Play/Pause control

Click the Play/Pause button on Music Speaker. The stereo player will switch between Play and Pause at each click.

Play Next

Press the Next button. The stereo player will start to play the next track in the play list.

Play Previous

Press the Previous button. The stereo player will start to play the previous track in the play list.

(Note: Talk Button)

Talk button function is valid only when Music Speaker is being used in conjunction with a mobile phone. If you click it by mistake and music stops playing then press and hold the Talk Button again and release it after you hear the beep to get music back again.

PAIRING MUSIC SPEAKER WITH YOUR MOBILE PHONE

Pairing is the procedure for linking two Bluetooth devices. You need to pair your Music Speaker with your mobile phone before you can use Music Speaker to receive or make calls. After pairing is complete you can use the Music Speaker only with the paired mobile phone. If you wish to use Music Speaker with a different mobile phone you must redo the pairing process with the new mobile phone. In this case the Music Speaker will no longer work with the previous mobile phone.

Pairing Music Speaker with your phone

Before you commence pairing ensure that the batteries on both your mobile phone and Music Speaker are fully charged.

Pairing steps:

- Turn on Music Speaker. It will go into pairing mode automatically as indicated by the amber and blue LEDs flashing alternately.
- Turn on your mobile phone and place it within a few meters of Music Speaker.
- On your phone initiate the device discovery procedure. (Refer to your phone's user guide for details of how to initiate this feature)
- After a few seconds your phone should display Music Speaker's Bluetooth name: "BlueBox".
- When prompted by your phone enter the default pin code "0000".
- When pairing is complete, the amber LED will switch off and the blue LED will blink slowly.

Making, Receiving and Handling Calls

To make calls from your mobile phone

Dial the call from your mobile phone. Stereo playback will stop and the call will be connected to Music Speaker automatically.

To make calls using voice dialing

Click the Talk button on Music Speaker. After you hear the voice dial tone, speak the name of the person you wish to call. The call is automatically connected to your mobile phone and Music Speaker.

To make calls using last number redial

Press and hold the Volume Up + button on Music Speaker for about 2 seconds. Release the button. The last dialed number will automatically connect to your mobile phone and Music Speaker.

Receiving calls

When there is an incoming call you will hear a ring tone from Music Speaker. Click the Talk button on Music Speaker and the call will be connected.

Reject calls (if supported by your mobile phone)

When there is an incoming call you will hear a ring tone from Music Speaker. Press and hold the Talk button on Music Speaker for more than 2 seconds. The call will be rejected. You can also reject the call on your phone directly.

Muting / Unmuting calls

While on a call press in the Mute button on Music Speaker. The microphone will be disabled. Press and release the button to activate the microphone.

Transfer calls

You can transfer a call from Music Speaker to your mobile phone handset and from your handset to Music Speaker. With the phone call on Music Speaker, press and hold Talk button for 3 seconds. The call will be transferred to your mobile phone.

To get the call back on **Music Speaker** simply click the Talk button.

Ending calls

When you want to finish a call, press the Talk button on Music Speaker. The call will be disconnected.

ENVIRONMENT

Do not throw this electrical device away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this you will help to preserve the environment.



For other PMR Bluetooth products or support, please view our website – www.pmr-technology.com or email info@pmr-technology.com or contact your local representative.

In addition to the troubleshooting table on the this page you can get support on the PMR support forum at this web address <http://www.pmr-technology.com/forum/>

A copy of the Declaration of Conformity is available in the products section on our website www.pmr-technology.com

VISUAL INDICATORS - 2 LEDs (blue and amber) indicate the status of Music Speaker:

Status	Indication
Battery full	Amber LED is off or dim
Battery low	Amber LED flashes instead of Blue LED
Music Speaker off	All LEDs are off
Music Speaker in standby mode, ready to make & receive calls	Blue LED flashes at 3 second intervals
Music Speaker in pairing mode	Blue and amber LEDs flash alternately.

TROUBLE SHOOTING

Please note that you should also be familiar with the operation of your mobile phone or other connecting Bluetooth device. Please read the user guide for your device carefully. For operation with a PC or laptop please note that these devices should also be Bluetooth enabled with appropriate third party software in order to enable correct operation.

Symptom/Problem	Solution
When Power button is pressed, no LED indicator	-Unit not charged -Consult authorized dealer
Music Speaker will not enter pairing mode	-Disable Bluetooth on the last player or phone that was connected to -Music Speaker or try switching that device off
Music Speaker powers on with blue LED flashing but no connection to player or mobile phone	-Check unit is paired to phone. -Check settings in phone. Music Speaker default name is "BlueBox" -Check player/phone is switched on -Check handsfree settings for phone -Ensure Music Speaker & phone are within range
Music Speaker does not charge	-Check USB charger cable is connected to the Music Speaker securely & PC is switched on -Consult authorized dealer
Music stops playing when Talk Button is clicked / audio stops	-Talk Button causes Music Speaker to try to connect to your mobile phone. Only press the Talk Button if Music Speaker is paired with an active mobile phone -Press and hold Talk Button until you hear the beep to restart music play

DISCLAIMER

While every effort has been made to ensure that the information in this manual is accurate and complete, no liability will be accepted for any errors and/or omissions made. The manufacturer reserves the right to make changes and improvements to the specifications and features of the hardware and firmware of the products described in this document without prior notice. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form is prohibited without prior permission of the manufacturer. All trademarks acknowledged. The product is Bluetooth qualified by Nolan Systems.